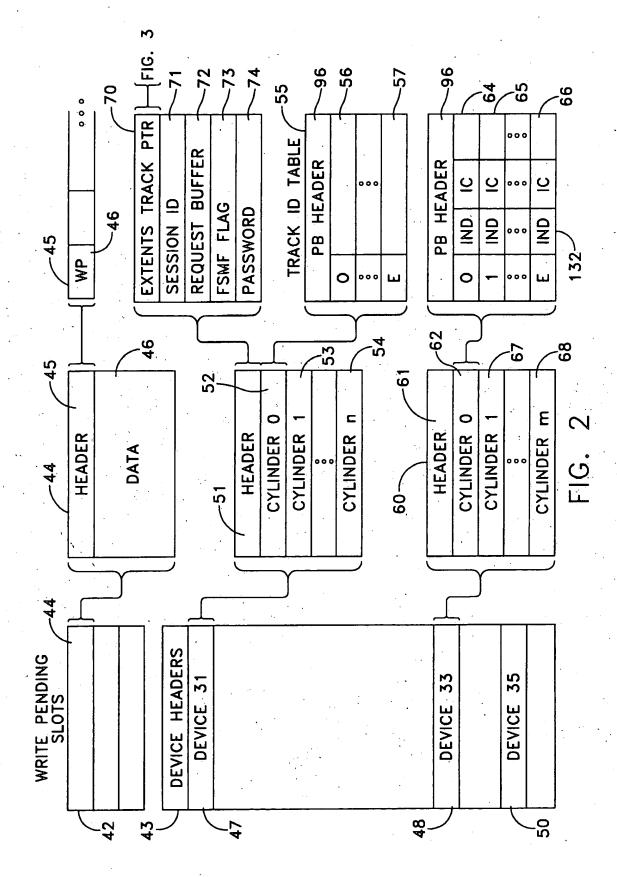


FIG. 1







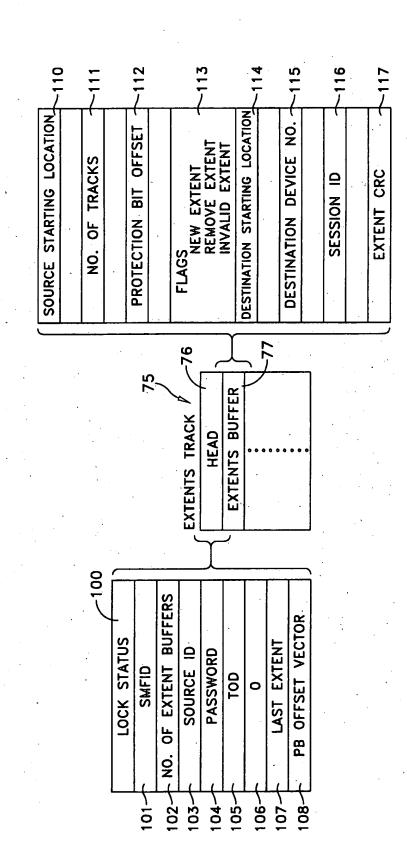


FIG. 3



CALL FROM DESTINATION DEVICE	CALL FROM SOURCE DEVICE
SOURCE DEVICE NUMBER	DESTINATION DEVICE NUMBER
RECORD NUMBER OF STARTING EXTENT	CYLINDER ADDRESS OF DESTINATION DEVICE
RECORD NUMBER OF ENDING EXTENT	HEAD IDENTIFIER OF DESTINATION DEVICE
	SOURCE DEVICE NUMBER RECORD NUMBER OF STARTING EXTENT RECORD NUMBER OF

FIG. 4




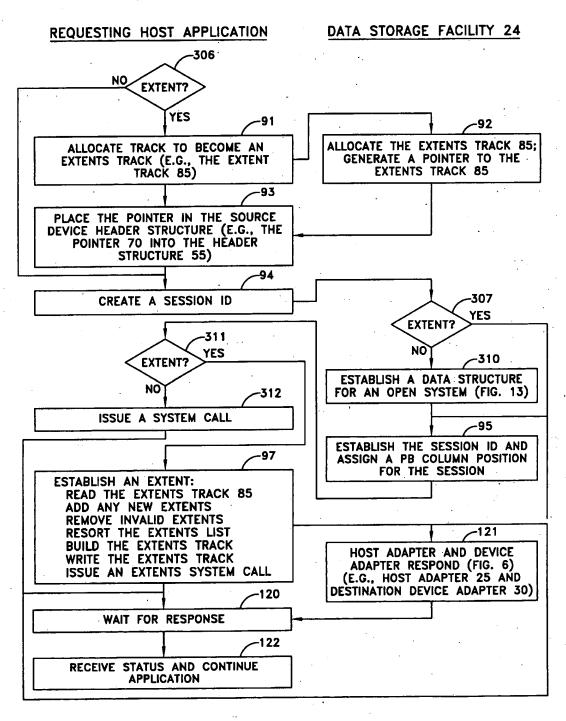


FIG. 5




HA CONTROLLER 86


DA CONTROLLER 88

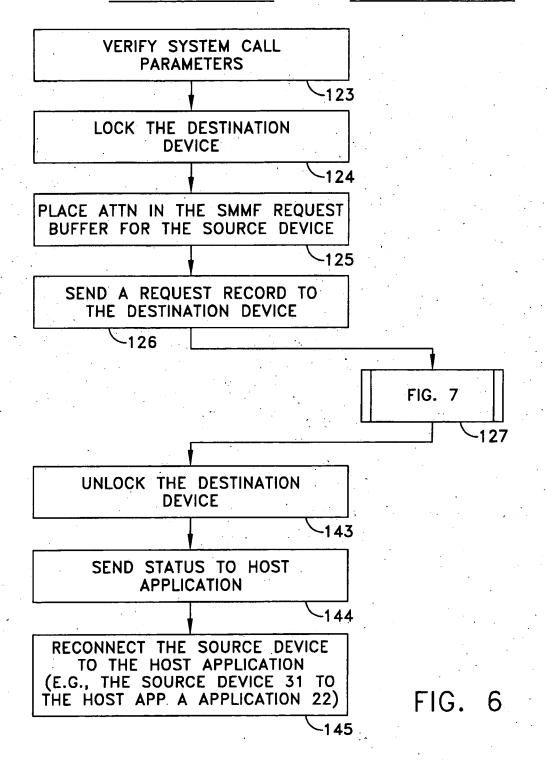




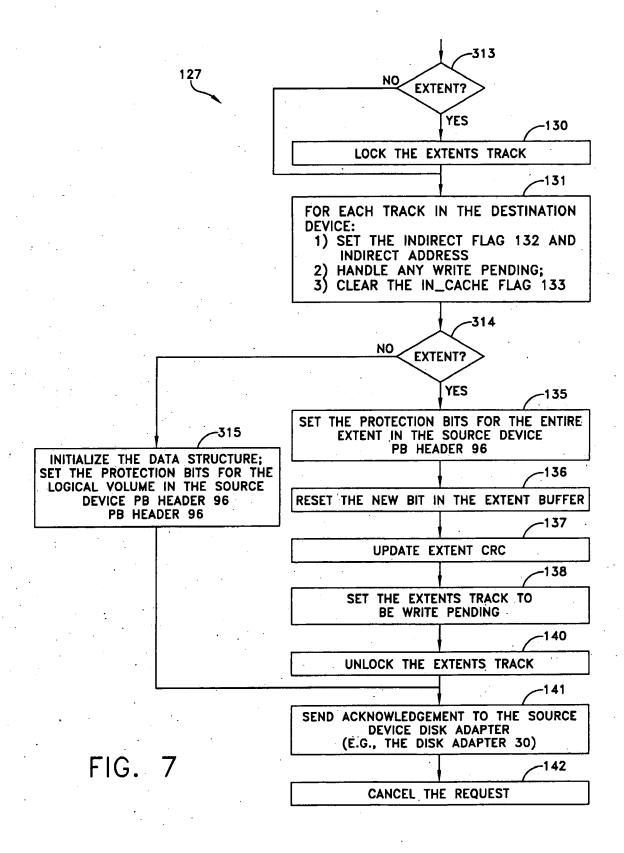




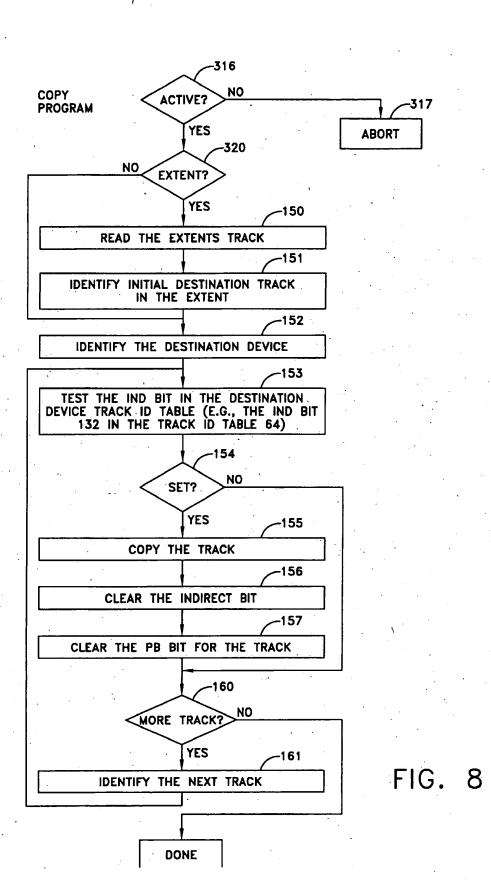



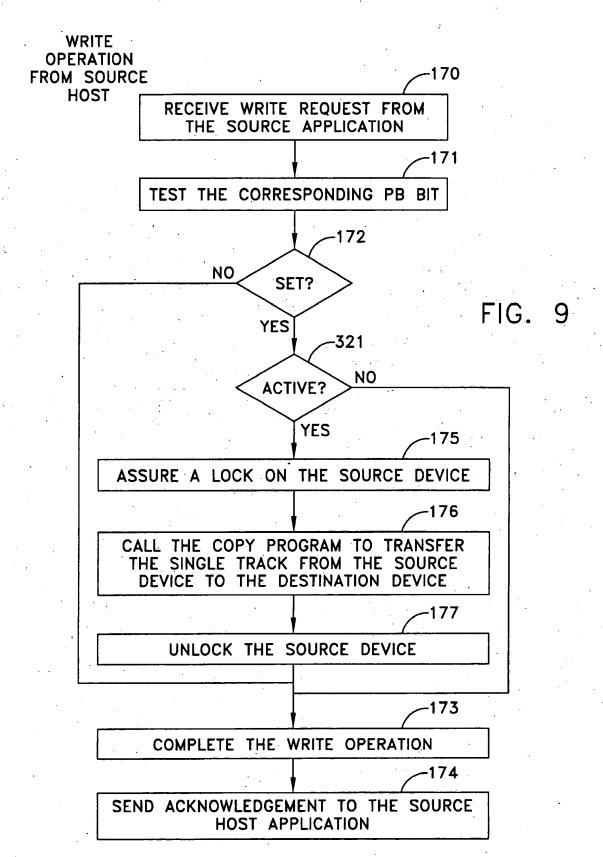



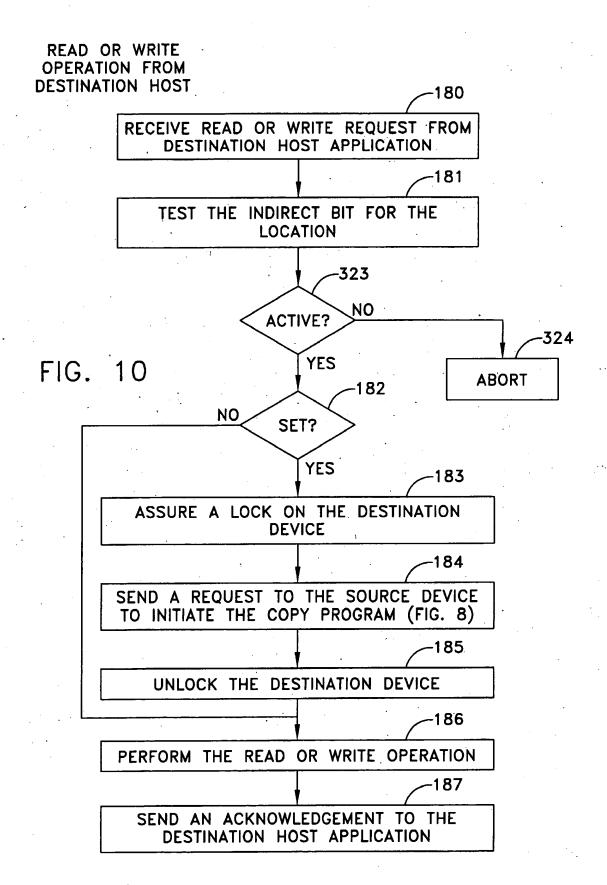




-325 EXTENT? YES -190 READ THE EXTENTS TRACK (E.G., THE EXTENTS TRACK 75) -191 SET APPROPRIATE REMOVE EXTENT FLAGS (E.G., THE REMOVE EXTENTS FLAG IN THE FLAGS FIELD 113) -192 WRITE THE EXTENTS TRACK TO THE CACHE MEMORY 27 IN THE DATA STORAGE FACILITY 24 -194 ISSUE A REMOVE EXTENTS SYSTEM CALL HOST ADAPTER AND DESTINATION DEVICE ADAPTER (E.G., HOST ADAPTER 25 AND DESTINATION -204 DEVICE ADAPTER 32) RESPOND WAIT FOR RESPONSE (FIG. 12) -205 READ THE EXTENTS TRACK -206 DELETE ALL TERMINATED EXTENTS -207 RESORT THE EXTENTS LIST -210 WRITE THE EXTENTS TRACK TO THE CACHE MEMORY 27 IN THE DATA STORAGE FACILITY 24 FIG. 1 -211 NO COMPLETE? YES -212 ISSUE AS REMOVE SESSION ID SYSTEM CALL DONE

DATA STORAGE FACILITY 24

REQUESTING HOST APPLICATION



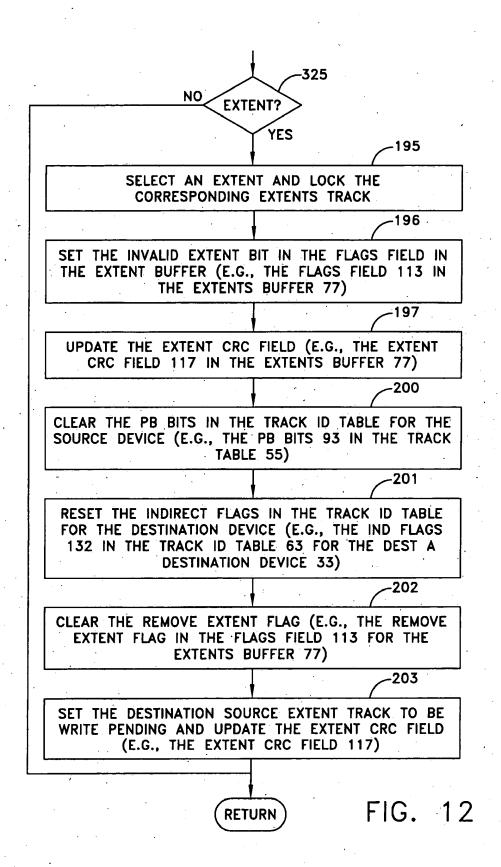




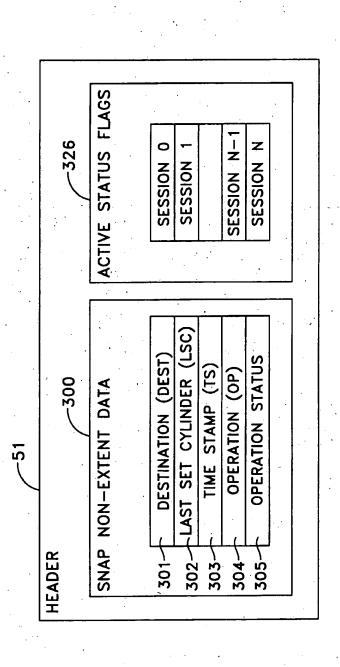


FIG. 13





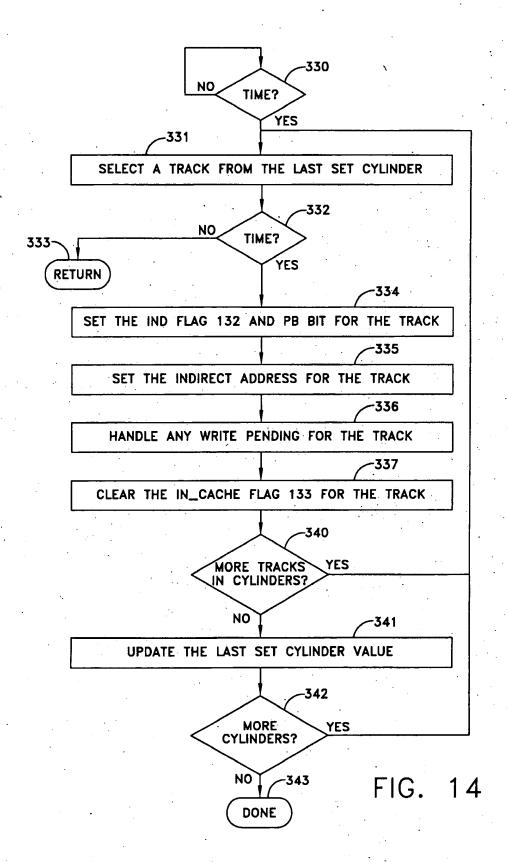

REQUESTING HOST APPLICATION

DATA STORAGE FACILITY 24

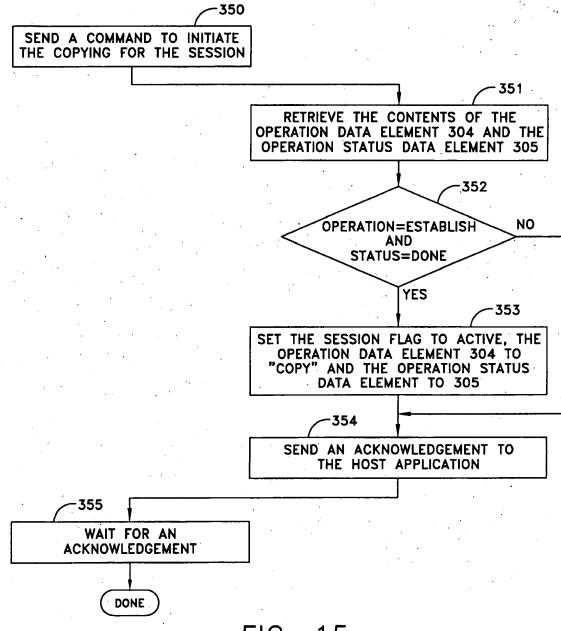


FIG. 15